



Precalibrated & Ready to Use!



Humidity and Temperature Indicators

Gauge humidity levels for greater indoor comfort

Assess comfort level of your environment with unique comfort indicator symbol that displays comfortable, wet (high humidity), or dry (low humidity). Read temperature, humidity, and time on easy-viewing digital thermohygrometer display.

Features

- Reliable measurements, guaranteed!
 Precalibrated to NIST-traceable standards.*
- ✤ User-selectable °F or °C units
- Max/Min reading for temperature and humidity
- Clock with alarm and date
- Preserve battery life with auto shut-off
- Hands-free operation with stand or wall-mount option

Additional features for model 20250-31

 Monitor outdoor temperatures with external temperature probe (included)

Applications

- Educational
- Residential
- Laboratory
- + Light industrial
- ♦ R&D

Includes

Built-in desktop stand, wall-mounting bracket, one AAA battery, and NIST-traceable certificate with data and uncertainties. Model 20250-31 also includes an external temperature probe with a 3-ft (0.9-m) cable.

*Calibration certificate provided by InnoCal®, an ISO17025 accredited laboratory (A2LA certificate 1746.01) offering a broad range of NIST-traceable calibration services.

For recalibration, call 866-466-6225 or e-mail info@innocalsolutions.com. Their full complement of services can be viewed at www.innocalsolutions.com.

Description	Humidity and temperature indicator	Humidity and temperature indicator with external probe
Catalog number	MW-20250-30	MW-20250-31
Range		
Humidity	10 to 90% RH	10 to 90% RH
Temperature (internal sensor)	32 to 120°F (0 to 50°C)	32 to 120°F (0 to 50°C)
Temperature (external sensor)	—	–58 to 158°F (–50 to 70°C)
Resolution		
Humidity	1%	1%
Temperature (internal sensor)	0.1°F/C	0.1°F/C
Temperature (external sensor)	—	0.1°F/C
Accuracy		
Humidity	\pm 5% (40% RH ~ 80% RH), \pm 8% remaining range	±5% (40% RH ~ 80% RH), ±8% for remaining
Temperature (internal sensor)	±1.8°F (1°C) 32 to 120°F (0 to 50°C)	±1.8°F (1°C) from 32 to 120°F (0 to 50°C)
Temperature (external sensor)	_	$\begin{array}{l} \pm 5^{\circ} F \left(2.5^{\circ} C\right) \text{ from } -58 \text{ to } -22^{\circ} F \left(-50 \text{ to } -30^{\circ} C\right), \\ \pm 3^{\circ} F \left(1.5^{\circ} C\right) \text{ from } -22 \text{ to } 32^{\circ} F \left(-30 \text{ to } 0^{\circ} C\right), \\ \pm 1.8^{\circ} F \left(1^{\circ} C\right) \text{ from } 32 \text{ to } 104^{\circ} F \left(0 \text{ to } 40^{\circ} C\right), \\ \pm 4^{\circ} F \left(2^{\circ} C\right) \text{ from } 104 \text{ to } 122^{\circ} F \left(40 \text{ to } 50^{\circ} C\right), \\ \pm 5^{\circ} F \left(2.5^{\circ} C\right) \text{ from } 122 \text{ to } 140^{\circ} F \left(50 \text{ to } 60^{\circ} C\right), \\ \pm 6^{\circ} F \left(3^{\circ} C\right) \text{ from } 140 \text{ to } 158^{\circ} F \left(60 \text{ to } 70^{\circ} C\right) \end{array}$
General		
Display	Three-line LCD	Four-line LCD
Auto power-off	Unit shuts off automatically after six minutes to preserve battery life	
Dimensions (L x W x H)	4¼" x 2¼" x 5⁄16" (10.8 x 5.7 x 0.8 cm)	
Power	One AAA battery	



USA

Cole-Parmer Toll-free: 800-323-4340 Phone: 847-549-7600 ColeParmer.com

CANADA

Toll-free: 800-363-5900 Phone: 514-355-6100 ColeParmer.ca

Davis Instruments Toll-free: 800-358-5525 Phone: 847-327-2000 Davis.com

Free Phone: 0500-345-300

Phone: 020-8574-7556

ColeParmer.co.uk

For Calibration, InnoCal Toll-free: 866-466-6225

InnoCalSolutions.com

UNITED KINGDOM INDIA

Phone: 91-22-6716-222 ColeParmer.in

INTERNATIONAL CUSTOMERS Call 847-549-7600

ColeParmer.com/dealers