

SERVICE

For service, contact Midtronic for a Return Authorization number, and return the unit to Midtronics freight prepaid, Attention: RA#. Midtronics will repair or replace the tester and re-ship, the next scheduled business day following receipt, using the same type carrier and service as received. If Midtronics determines that the failure was caused by misuse, alteration, accident, or abnormal condition of operation or handling, purchaser will have the option of purchasing a replacement tester or the unit will be returned freight collect. Battery testers beyond the warranty period are subject to the repair charges in effect at that time.

PATENTS

This tester is made in the U.S.A. by MIDTRONICS, INC. and is protected by one or more of the following U.S. Patents: 6,323,650; 6,316,914; 6,304,087; 6,249,124; 6,172,505 B1; 6,163,156; 6,091,245; 6,051,976; 5,914,605; 5,831,435; 5,821,756; 5,757,192; 5,598,098; 5,592,093; 5,585,728; 5,574,355; 5,572,136; 5,343,380; 5,140,269; 4,912,416; 4,881,038; 4,825,170; 4,816,768; 4,322,685; Canadian patents: 1,280,164; 1,295,680; United Kingdom patents: 0,417,173; 0,672,248; German patents: 689 23 281.0-08; 693 25 388.6; 93 21 638.6; and other U.S. and Foreign patents issued and pending. This product may utilize technology exclusively licensed to Midtronics, Inc. by Johnson Controls, Inc. and/or Motorola, Inc.

LIMITED WARRANTY

This battery tester is warranted to be free of defects in materials and workmanship for a period of one year from the date of purchase. Midtronics will, at our option, repair the unit or replace the unit with a remanufactured tester. This limited warranty applies only to Midtronics battery testers and does not cover any other equipment, static damage, water damage, over-voltage, dropping unit or damage resulting from extraneous causes including owner misuse. Midtronics is not liable for any incidental or consequential damages for breach of this warranty. The warranty is void if owner attempts to disassemble the unit, or to modify the cable assembly.



SCP 6/12 BATTERY CONDUCTANCE TESTER

Franklin Electric | Grid Solutions
Stationary Power Devices
7133 Monroe Street
Willowbrook, IL 60527
1.844.344.5025
www.franklingrid.com

SUPPORT, SERVICE & WARRANTY:
Midtronics, Inc.
7000 Monroe Street
Willowbrook, IL 60527
1.630.323.2800
www.midtronics.com

INSTRUCTION MANUAL

168-850_003 5/19

©2019 Franklin Electric Co., Inc.

CELLTRON SCP 6/12 TESTING ADVANTAGE:

Uses patented conductance technology to determine relative battery state of health. This means you can safely, quickly, and accurately test a battery.

CONDUCTANCE TECHNOLOGY:

Conductance is a measurement of the plate surface available in the battery, which determines how much power (or current) the battery can supply. As a battery ages, the plate surface can sulfate or shed active material which adversely affects its ability to perform. In addition, conductance can be used to detect cell defects, shorts, and open circuits, which will reduce the ability of the battery to deliver current.

Using conductance, Celltron Battery Testers are able to determine the battery's true state of health.

A conductance tester does not put a load on the battery, which means no heat or sparks are created during testing. This makes the Celltron SCP 6/12 safe to use anywhere.

SPECIFICATIONS

Voltmeter Operating Range:	+6.0 to +19.99 Vdc
Voltage Accuracy:	+/-50 mV across operating range
Operating Temperature:	-18 to 50 °C (0 to 120 °F)
Voltage Test Limits:	12 V High = 13.80 V
	12 V Low = 12.00 V
	6 V High = 6.90 V
	6 V Low = 6.00 V
Siemens Range:	20 to 1200 S

CAUTION: Attempting to operate the SCP 6/12 beyond its specified operating range may permanently damage the unit.

SAFETY PRECAUTIONS

- Always comply with facility safety standards when performing maintenance.
- Because of the possibility of personal injury, always use extreme caution when working with batteries. Safety glasses should be worn.
- To avoid electrical shock, remove personal metal items such as rings, bracelets, necklaces, watches, etc.
- To determine if the battery can be safely tested, inspect the battery for a bulging case, leakage, cracks in the case, or other visible signs of defects/problems.

CONDUCTANCE AND VOLTAGE MEASUREMENTS

The SCP 6/12 measures and displays the direct current voltage (Vdc) and conductance for any 6 or 12 volt battery rated between 1.2 and approximately 50 ampere hours (Ah) of discharge capacity. DC voltage is a measure of a battery's electrical potential.

Conductance is a relative measure of a battery's ability to meet its rated capacity. The SCP 6/12 displays the conductance value in siemens (S). In general, a high relative conductance measurement is an indication of a good battery, and a low measurement indicates battery in degraded condition.

ESTABLISHING A CONDUCTANCE REFERENCE VALUE

Battery performance is temperature dependent. Allow the batteries to reach room temperature before testing—ideally around 25 °C (77 °F). (Refer to the **Battery Temperature Compensation Scales** below for the compensation factor.)

Because conductance is a relative measure, you must first establish a reference value by testing a sample number of new batteries. To establish a reference value, record the average of at least 10 fully-charged batteries of the same or similar models, preferably within 90 days of their installation. Midtronics recommends that the batteries should all test within 20% of each other (+/-10% of the average). (Consult your battery supplier for conductance standards.) If new batteries are not available, record the average of installed batteries of the same or similar models regardless of age. If the installed batteries test within 10% of each other, the highest value can be used as a temporary reference until new batteries are available for testing.

Example: Within 90 days of installation, measure a sample of 20 new batteries (12 V, 17 Ah) that average 300 S each when fully charged. Conductance will decline as a battery ages. The amount of acceptable loss will depend on the type of application for which the battery is used. As a general rule:

- <30% loss = **Strong Battery**—no significant capacity loss (300 x 0.70 or more 210 S)
- 30 to 40% loss = **Marginal Battery**—nearing the end of its serviceable life (180 to 210 S)
- >40% loss = **Degraded Battery**—may not meet the required load (300 x 0.60 or less 180 S)

Consult your battery supplier to ensure that the rated battery capacity is sufficient for the applicable equipment runtime while allowing for the appropriate aging factor of the batteries.

BATTERY TEMPERATURE COMPENSATION SCALES

Battery Temperature	Multiply SecurePower %Ref. Value by ____
35 °C (95 °F) or warmer	0.930
30 °C (86 °F)	0.965
25 °C (77 °F)	1.000
20 °C (68 °F)	1.035
15 °C (59 °F)	1.070
10 °C (50 °F)	1.105
5 °C (41 °F)	1.140
0 °C (32 °F) or colder	1.175

Examples:


Using a reference value of 300, the SCP 6/12 reports 63%, 190 S. If the battery temperature is 35 °C ($0.63 \times 0.93 = 0.59$ or 59%), the battery should be replaced.

Again using a reference value of 300, the SCP 6/12 reports 63%, 190 S. If the battery temperature is 0 °C ($0.63 \times 1.175 = 0.74$ or 74%), the battery is good.

SCP 6/12 KEYPAD AND LEDS

UP ARROW:
Press for 12-volt batteries and to scroll to the reference value (20 to 1200 siemens).

VOLTMETER:
Press at any time to read DC voltage

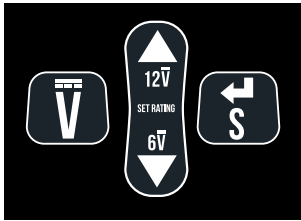

ENTER:
Press to select the reference value, to start the test, and to display conductance in siemens (S)

DOWN ARROW:
Press for 6-volt batteries and to scroll to the reference value (20 to 1200 siemens).

The red LEDs above the keypad indicate the test mode and the numerical value shown on the display (voltage, siemens, and percent of reference). You can use the SCP 6/12 as a voltmeter at any point in the test procedure by pressing the **VOLTMETER** button.

BATTERY TEST PROCEDURE

1. Disconnect the battery from the system.
2. Connect the tester clamps to the battery: red to positive (+), black to negative (-).
3. Select the voltage by pressing the UP ARROW button for 12 volts or the **DOWN ARROW** button for 6 volts. Press **ENTER**.
4. Scroll to the reference value by pressing the **UP** or **DOWN ARROW** buttons. Press **ENTER**. (The tester will default to the last reference value entered.)
5. Start the test by pressing **ENTER**. A series of dots will flash on the display while the SCP 6/12 measures conductance and voltage, and calculates a percentage of reference.
6. The first value displayed is the percentage of reference.
7. To display the actual conductance value (S), press and hold the **ENTER** button.
8. To display voltage, press the **VOLTMETER** button.

TROUBLESHOOTING

TOO LOW: The battery's voltage is below the specified operating range (< 6.00 V for a 6 V battery or <12.00 V for a 12 V battery).

Note: If the battery is below 5.5 V the tester will not operate.

TOO HI: The battery's voltage is above the specified operating range (> 6.90 V for a 6 V battery or >13.80 V for a 12 V battery).

999 (or 9999 when ENTER is pressed): The battery has exceeded the range specified. Refer to **SCP 6/12 Specifications** on the back of the manual for the tester's operating range.

Excessive electromagnetic interference may cause the tester to reset. If the tester resets during testing, simply disconnect it from the battery, reconnect and start the test process again.